

# One-way adaptors

## ■ PHASE SEQUENCE ADAPTORS FOR VOLTAGES >50V - 50 HZ - IP44

ADAPTO Series

ONLY FOR TEMPORARY APPLICATION



Plug	Socket	Voltage	□	
3P+E - 16A - 9h	3P+E - 16A - 9h	200/250 V	10/50	610.3444
3P+E - 16A - 6h	3P+E - 16A - 6h	380/415 V	10/50	610.3646
3P+N+E - 16A - 6h	3P+N+E - 16A - 6h	346/415 V	10/50	610.3747

- This device reverses the sequence of phases between the power supply and the rotating machine. It must be plugged in between the rotating machine plug and the power supply socket.

- Specially useful for temporary connection to the three-phase power supply of machines such as concrete mixers, small cranes, sanders, drills, circular saws, etc.

## ■ CURRENT ADAPTORS FROM 32A TO 16A FOR VOLTAGES >50V - 50 HZ - IP44

ADAPTO Series

ONLY FOR TEMPORARY APPLICATION



Plug	Socket	Voltage	□	
3P+E - 32A - 9h	3P+E - 16A - 9h	200/250 V	10/50	610.3464
3P+E - 32A - 6h	3P+E - 16A - 6h	380/415 V	10/50	610.3666

- Used to supply 16A loads with 3P+E plugs from 32A 3P+E power supply sockets.

- The adaptor's 32A plug is first plugged into the 32A power supply socket and then the 16A plug of the load to be supplied is plugged into the adaptor's 16A socket.

## ■ CONFIGURATION ADAPTORS FROM 3P+N+E TO 3P+E FOR VOLTAGES >50V 50 HZ - IP44

ADAPTO Series

ONLY FOR TEMPORARY APPLICATION



Plug	Socket	Voltage	□	
3P+N+E - 16A - 6h	3P+E - 16A - 6h	380/415 V	10/50	610.3746

- Used to supply 16A loads with 3P+E plugs from 16A 3P+N+E power supply sockets.

- The adaptor's 16A 3P+N+E plug is first plugged into the 16A 3P+N+E power supply socket and then the 16A 3P+E plug of the load to be supplied is plugged into the adaptor's 16A 3P+E socket.